HOME

MEDICAL IMAGING

CSO Customer Support Operations

Technical Documentation

Document Order No.: DD+DIS123.00E

1 Piece T5OCU MA1

F9.5155.0153.0
(only needed for production purposes)

April 2000

ADC Solo
Type: 5155

Modification Instructions

Exchange of Display Cover

File this Document in Section 10 in your Technical Documentation “ADC Solo”.

List of Contents

1 General Information 1
2 Description 1

printed in Germany

AGFA

1 General Information

The design of the front panel has changed. Digitizers newer than **SN 1330** are delivered without a display cover. Consequently display covers are not produced any more.
If the display cover has become defective during frequent operation there are three alternatives to replace the defective display cover depending, whether additional display covers are on stock or not.
Alternative 1 (if no display covers are on stock or if the locking mechanism is broken): Replace the whole front panel (CM+ 9.5155.1210.2) with a new one. Display covers will only be available for a short period of time. The old front panel design will be taken out of stock pretty soon.
Alternative 2 (if display covers are on stock and the hinge of the display cover is broken): Exchange the complete display cover including the hinge (CM+ 9.5155.9060.1).
Alternative 3 (if display covers are on stock and the hinge of the display cover is not broken): Remove the display cover from the hinge and insert a new one (CM+ 9.5155.9060.1).

Figure 1

1. Phillips screw driver, medium size
2. Slotted head screw driver, larger than medium size

2 Description

Alternative 1
If no display covers are on stock or if the locking mechanism is broken: Exchange the entire front panel (CM+ 9.5155.1210.2).

1. Remove the right side panel (without tools).
2. Turn the screws of the left panel (quarter turn).
3. Remove the left side panel.
4. Open and remove phillips screws of top panel at rear of the digitizer.
5. Lift top panel and slide it towards the rear.
6. Open the three phillips screws along the left side and the three phillips screws along the right side of the front cover. Be careful with the washers.

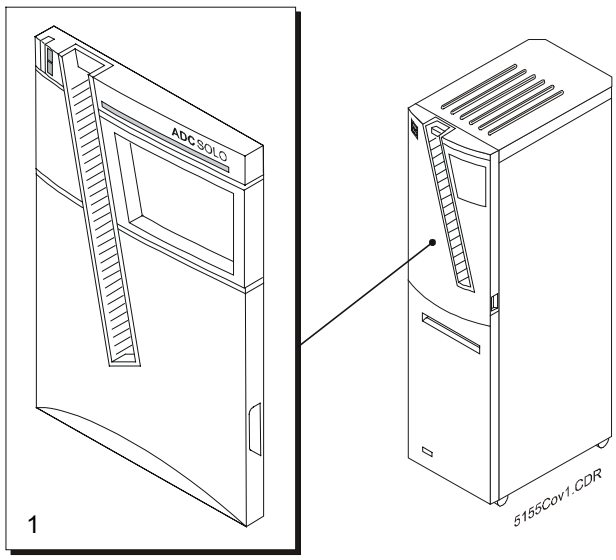

Figure 2

7. Open the front door at the bottom of the digitizer.
8. Remove the front panel to be exchanged.
9. Insert the new front panel in reverse order of the described steps.
10. When you insert the new front panel make sure that the bores are in the right position.

Alternative 2

If display covers are on stock and the hinge of the display cover is broken: Exchange the complete display cover including the hinge (CM+9.5155.9060.1).

1. Remove right side panel.
2. Remove the three phillips screws of the plastic hinge. Use a phillips screw driver.
3. Pull the old hinge out of the frame.
4. Insert the new hinge into the frame.
5. Fix it with the phillips screws.

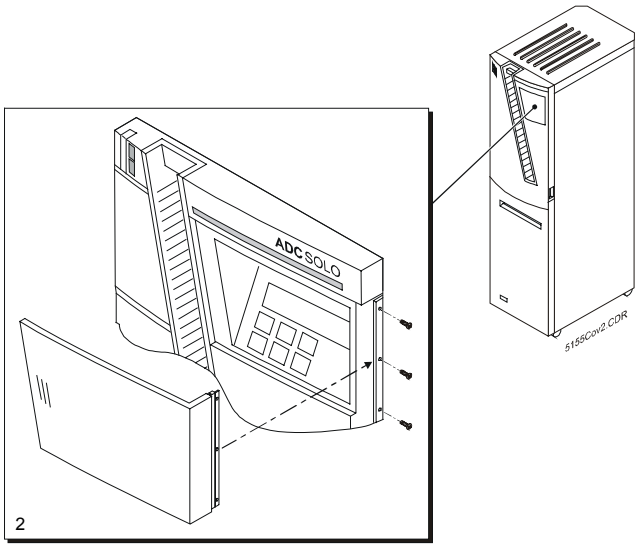

Figure 3

Alternative 3

If display covers are on stock and the hinge of the display cover is not broken: Exchange the display cover only (CM+ 9.5155.9060.1).

1. Open the display cover.
2. Hit it gently but determined either from top or bottom and remove the old display cover by sliding it out of the hinge.
3. Insert the new display cover by sliding it into the rail of the hinge. Slide it until it exactly reaches the level of the hinge.

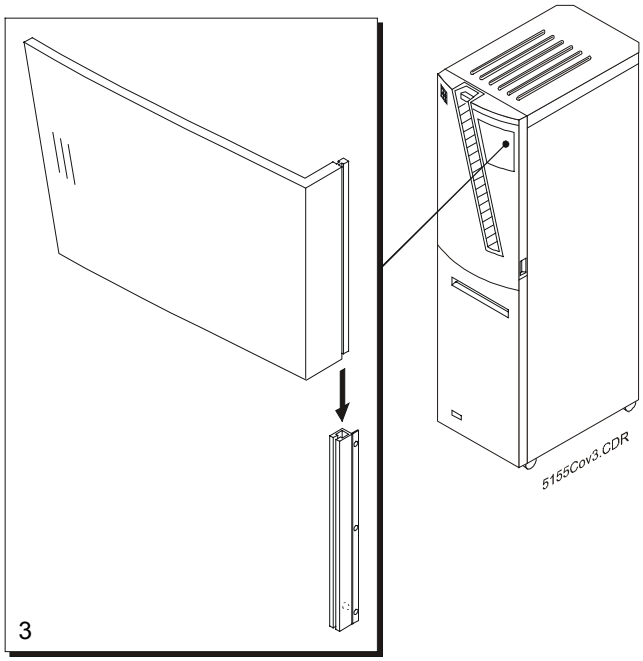

Figure 4